


INSTRUMENT APPROACH CHART - ICAO

AERODROME ELEV 778 - 28 hPa
THR RWY 28 ELEV 771 - 28 hPa
OCH RELATED TO THR RWY 28

TUŘANY/TOWER 119,600
125,425
121,500
BRNO
APPROACH/RADAR 120,550
119,900
121,500

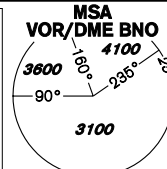



**BRNO/Tuřany
RNAV (GNSS)
RWY 28**

VAR 3°E 2010

BEARINGS ARE MAGNETIC
ALTITUDES AND ELEVATIONS IN FEET
AND DISTANCES IN NM


INITIAL AND MISSED APPROACH
TURN SPEED LIMITED TO MAX IAS 220 KT

MINIMUM TEMPERATURE FOR
BARO-VNAV OPERATIONS: -15°C

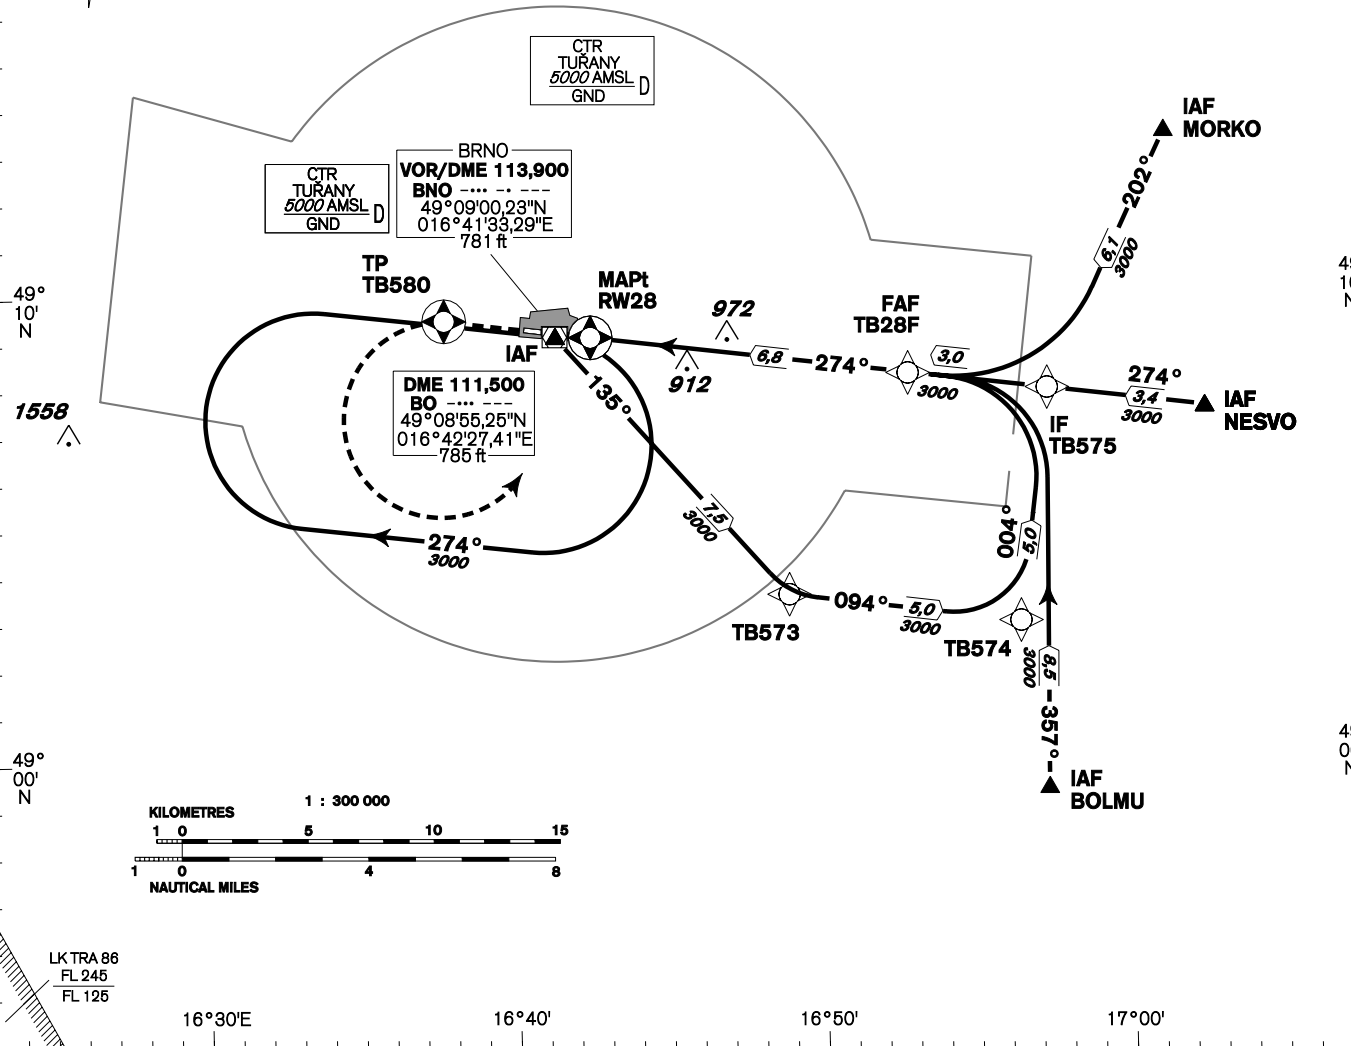

MISSED APPROACH:
Climb to TB580,
turn left to VOR/DME BNO
in climbing to 3000ft.

THR 490859.12N 0164242.83E
ELEV 771 - 28 hPa

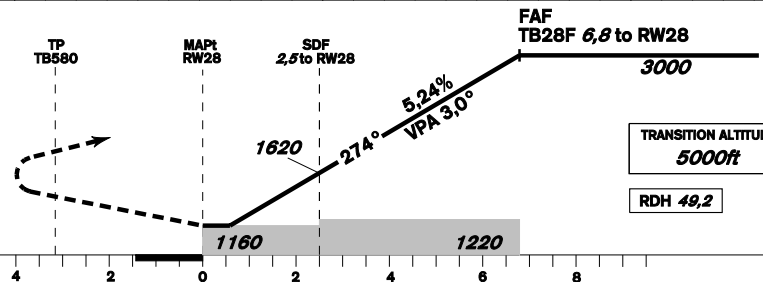

TRANSITION ALTITUDE
5000ft
RDH 49,2

OCA/OCH	ft	A	B	C	D	DIST THR (MAPt) / NM	9	8	7	6	5	4	3	2	1	
		1160/390					ALTITUDES ft	3690	3370	3050	2730	2410	2090	1780	1460	1140
LNAV/VNAV	ft	1090/310					kt	80	100	120	140	160	180			
Circling	ft	1220 L/-	1470 L/-	1590 L/-	1680 L/-	min:sec		5:08	4:06	3:25	2:56	2:34	2:17			
							Rate of descent	ft/min	420	530	640	740	850	960		

Timing is not authorized for defining the MAPt.



Seznam traťových bodů / Way point list		
BOLMU	48 59 08,83 N	016 57 20,84 E
MORKO	49 13 08,82 N	017 01 34,81 E
NESVO	49 07 13,85 N	017 02 42,08 E
VOR/DME BNO	49 09 00,23 N	016 41 33,29 E
TB28F	49 08 04,91 N	016 53 02,78 E
RW28	49 08 59,12 N	016 42 42,83 E
TB573	49 03 23,79 N	016 49 01,27 E
TB574	49 02 43,89 N	016 56 33,16 E
TB575	49 07 40,86 N	016 57 34,34 E
TB580	49 09 23,81 N	016 37 56,75 E

Posloupnost traťových bodů / Way point sequence Od IAF VOR/DME BNO /From IAF VOR/DME BNO		
VOR/DME BNO	IAF	fly-by
TB573		fly-by
TB574		fly-by
TB575	IF	fly-by
TB28F	FAF	fly-by
RW28	MAPt	fly-over
TB580		fly-over
VOR/DME BNO		

Posloupnost traťových bodů / Way point sequence Od IAF MORKO/From IAF MORKO		
MORKO	IAF	fly-by
TB575	IF	fly-by
TB28F	FAF	fly-by
RW28	MAPt	fly-over
TB580		fly-over
VOR/DME BNO		

Posloupnost traťových bodů / Way point sequence Od IAF NESVO/From IAF NESVO		
NESVO	IAF	fly-by
TB575	IF	fly-by
TB28F	FAF	fly-by
RW28	MAPt	fly-over
TB580		fly-over
VOR/DME BNO		

Posloupnost traťových bodů / Way point sequence Od IAF BOLMU/From IAF BOLMU		
BOLMU	IAF	fly-by
TB575	IF	fly-by
TB28F	FAF	fly-by
RW28	MAPt	fly-over
TB580		fly-over
VOR/DME BNO		